Victoria's Secret Clip-On Mini Speaker User Manual

BC



 
THIS IS NOT A TOY

ONLY USE UL CERTIFIED WALL ADAPTERS AND THE UL CERTIFIED CORD INCLUDED WITH THIS PRODUCT.

Model NO. GWP1727

Victoria's Secret Clip-On Mini Speaker **User Manual**

- 1 ON/OFF Button
- 2 Light Indicator
- 3 Micro USB Charge Port
- 4 Speaker Unit
- 5 UL Certified USB to Micro
- 6 USB Connector
- 7 Micro-USB Connector



Victoria's Secret Clip-On Mini Speaker

Style No.	GWP-1727
Size	1.33 in. Diameter x 1.12 in. Approx.
Weight	33g
Connect	Wireless
USB Charge Cord	20 Inches
Bluetooth Version	V 5.0
Frequency	20Hz~20KHz
Input	DC 5V/500mA, 3.7V
Power Source	USB
Battery Type	UL Certified HZ 602025 li-ion polymer battery
Capacity	300mAh
Playing Time	2hrs
Charging Time	2hrs
Signal-to-Noise	75dB
Bluetooth Distance	32 Feet
Power On/Off	Hold Down the Power Button

Victoria's Secret Clip-On Mini Speaker **Operating Instructions**

- 1 Insert the USB port into a UL Certified USB Wall adapter or PC, *Using a non UL certified wall adapter IS NOT recommended.
- ② Plug Micro-USB cable into the Micro-USB Charging Port located on the bottom of the Speaker.
- ③ It is recommended that the speaker is fully charged before its first use/pairing.
- A red light will illuminate, indicating the device is charging.
- ⑤ A full charge takes up to 2 hours.
- © When the red light turns off, the speaker is fully charged.

Victoria's Secret Clip-On Mini Speaker

Power On: Hold down the power button until you hear a two tone sound. You will then see a flashing blue light. This indicates the speaker is looking to pair with a Bluetooth compatible device.

Pairing: Under your phone's Bluetooth settings, pair with the device named "MT". When pairing is successful, the blue light will become solid and you will hear another two toned sound. **Playing Music:** Choose a song on your device media player and enjoy. The light indicator will remain solid blue while connected. **Volume:** Use the controls on your phone to raise and lower the

Play and Pause: Press the play and pause button on your

Power Off: Hold down the power button until you hear a three toned sound. The light indicator will no longer illuminate.

Victoria's Secret Clip-On Mini Speaker **Notifications**

- Phone Call: If you are receiving a phone call while the music is playing, the blue light will turn solid and the music will stop. When the call has ended, the music will resume. When you make a call, the music will stop.
- NOTE: You cannot hear the person you are talking to through the speaker.
- **Text Message:** When you receive a text message while the music is playing, the music will continue to
- Notifications: When you receive a notification while the music is playing, the music will continue to play.

Victoria's Secret Clip-On Mini Speaker

Make sure the speaker is charged. If the speaker does not pair with your phone, power off the speaker and power it back on. If the issue persists, turn off your device and restart your phone. Check these further steps if you cannot resolve the issue:

- ① Make sure Bluetooth is enabled on your
- ② Check that the speaker is not connected to another device.
- 3 Make sure you are within 32 feet of the speaker with no barriers (walls, other large electronics) between the device and your phone.

For further troubleshooting steps, please visit www.electronicinquiries.com

Victoria's Secret Clip-On Mini Speaker Important Safety Instructions

IF USED IMPROPERLY. RISK OF ELECTRIC SHOCK COULD When using electronic products, basic precautions should RESULT IN SERIOUS INJURY OR DEATH.

- 1. Read these instructions.
- Keep these instructions.
- 3. Please pay careful attention to all warnings.
- Follow all instructions.
- 5. Only use the UL Certified Cord supplied by the manufacturer.
- 6. Unplug this device when unused for long periods of time.

Victoria's Secret Clip-On Mini Speaker WARNINGS/PRECAUTIONS

always be followed:

- DANGER: To prevent fire or shock hazards, do not expose to rain or moisture.
- **DANGER:** A wet or contaminated micro-USB connector may cause excessive heat or melting and may lead to fire damage or personal injury. Always charge your speaker with a clean, dry micro-USB connector that is included with the product.
- CAUTION: Charge the Bluetooth Speaker by using only the original USB cable included with the speaker. Using another USB cable may damage the device.
- **DO NOT** use alcohol or any type of abrasives to clean the speaker. You may use a soft dry cloth.
- **DO NOT** attempt to disassemble the speaker. This may lead to damaging the speaker permanently or cause serious injury.

Victoria's Secret Clip-On Mini Speaker WARNINGS/PRECAUTIONS - CONTINUED

- DO NOT expose the speaker to contact with sharp objects as this will cause scratching and damage.
- DO NOT stick anything inside the speaker as this may damage internal components and cause serious injury.
- **DO NOT** carry this unit by its cord or use the cord as a handle.
- **DO NOT** expose or charge the device to temperatures greater than 98°F (37°C) Lithium-ion batteries contain flammable electrolytes that may vent, ignite, and produce sparks when subjected to high temperature.
- DO NOT store the Bluetooth Speaker in any vehicle.
- **DO NOT** listen to the speaker while operating a vehicle. This may impair your ability to drive.
- Avoid severe physical shocks (ex. dropping).
- Never allow children to play with the speaker. Small parts may be a choking hazard.

Victoria's Secret Clip-On Mini Speaker WARNINGS/PRECAUTIONS - CONTINUED

- WARNING: If you do not intend to use the device for a certain period of time, the power cable should be unplugged from the unit to prevent fire, damage, or corrosion.
- Store the speaker in a cool dry place.
- **DANGER!:** If the speaker is cracked or damaged, do not attempt to charge. This may cause electric shock or electrocution.
- **DISPOSE OF THE DEVICE PROPERLY** at a recycling center.

Questions or Inquiries? Visit www.electronicinquiries.com

MADE IN CHINA / FAIT EN CHINE / HECHO EN CHINA DISTRIBUTED BY VICTORIA'S SECRET PINK REYNOLDSBURG, OHIO, 43068, USA

FCC ID: 2AHXQ1 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, i not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures - Regrient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FACTORY ADDRESS: IXIN GLOBAL TRADE DONG TIAN PLAZA, SUITE 603, 19 HAIAN ROAD, GUANGZHOU CHINA 510627





